



DL-360TB Power Transfer Door Loop (Detachable Terminal Blocks) Installation Instructions


Installation Steps

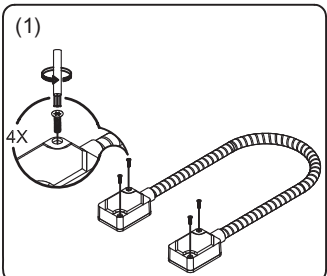


Remove the security screws using the enclosed tool.

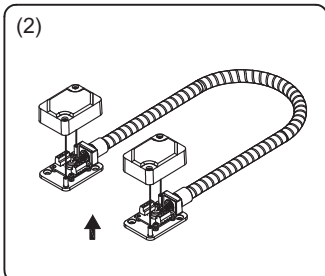


Remove the head covers.

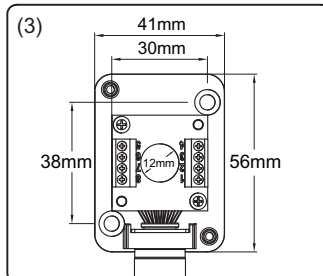


Position the two end caps where you plan to mount them and mark the holes on the door and frame.

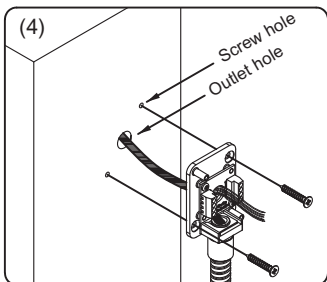

Drill holes in the marked positions, and secure the two ends by using 4x25 screws.
Screw hole diameter: 3.3mm
Outlet hole diameter: 12mm

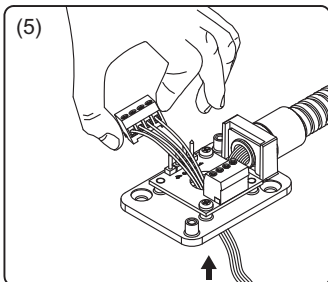


Attach the wires to the detachable terminal blocks and plug into each end.

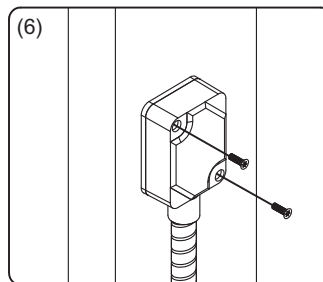


Mount the head covers and tighten the screws.

- Design with convenient terminal block concept and saves installation time
- Full system test prior to unit installation saves considerable time
- No chance of accidental site damage during last minute installation
- High grade components optimism operational life
- Patent M510002
- Voltage rating 2A/12VDC

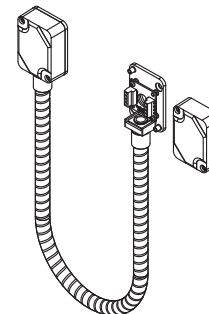

DL-360TB with Detachable Terminal Blocks

Wiring Diagram

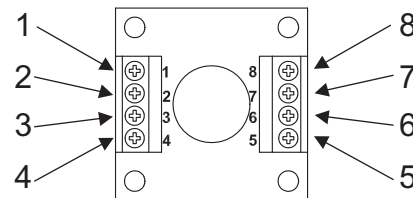

*Each terminal is wired on a one to one basis. Whatever is wired to a particular terminal number on one block will be connected to the same terminal number on the other block.