# ML-605M Series Electro-Mechanical Lock Installation Instruction


## Specification

- Operating Voltage: 12~24VDC/AC ±10%
- Current Draw: 250mA/12VDC; 150mA/24VDC
- Operating Temperature: 14°F to 120°F (-10°C~+49°C)
- Humidity: 0~85% non-condensing
- Version Changeable: Fail-safe or Fail-secure
- Lock bolt sensor switch output: SPDT, 3A/125VAC
- Latch Throw:16mm
- Solenoid testing: Tested to 250,000 cycles
- Backset:

ML-605M-30: 30mm


ML-605M-35: 35mm

## Packing Contents

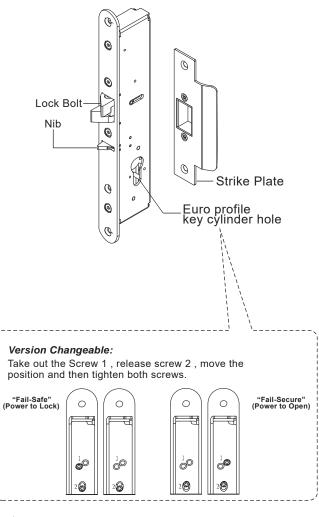


#### 🛕 Caution:

Do not completely remove screw 2 (as marked in the figure) as the interior solenoid might fall off.

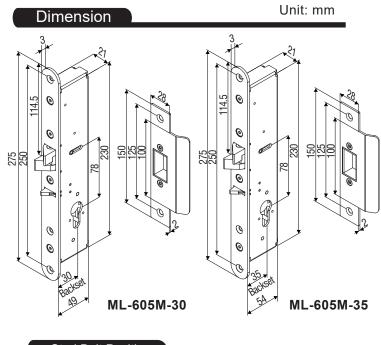


# Stud Bolt Position

 
For fail-safe mode




### For fail-secure mode

 


# Installation Instructions

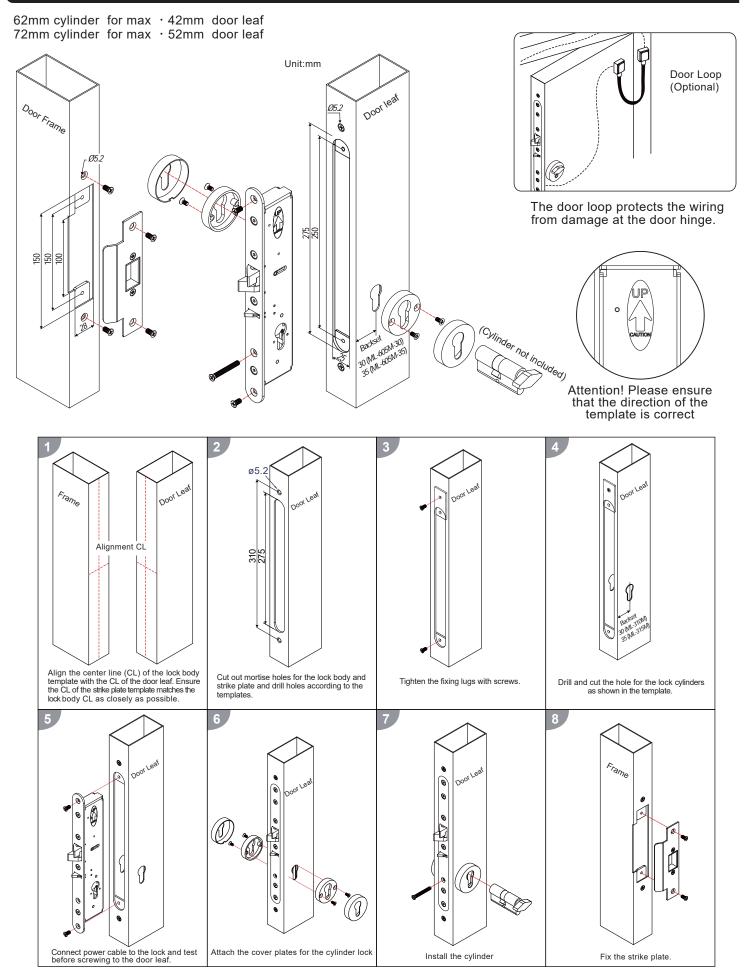

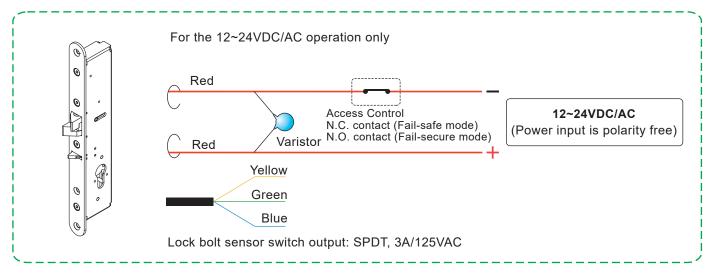

**NOTE:** The varistor (or diode) must be connected across the terminals as shown above. This protects the electromechanical lock from spikes and surges.

# Butt Splice (IDC) Connector

 

Using crimper or pliers and pressing the header of connector down to even position.