


Inswing narrow frame doors

LZ-NH350NAU Bracket

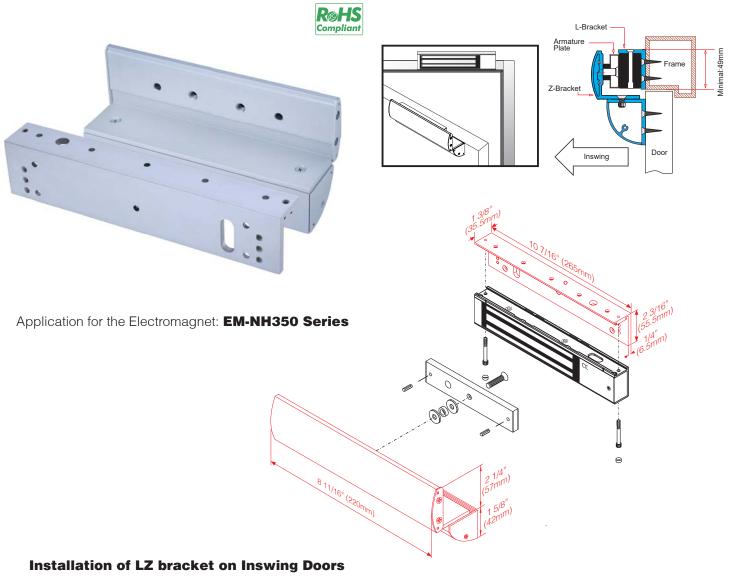





Install L bracket on the door frame. Make sure the door may be opened / closed.




Fasten the electromagent to L bracket with fixing screws.




Assemble Z bracket. Make sure it is still adjustable.




Insert the guide pins into the armature

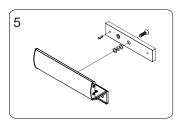

Fasten the armature plate to Z bracket. Insert the rubber washer between them.



Close the door and turn on the power.



Let the armature plate and electromagnet Fasten Z bracket to the door leaf. bond together. Press Z bracket to the door

