


## Inswing doors

## **LZ-GEM-D600 Bracket**

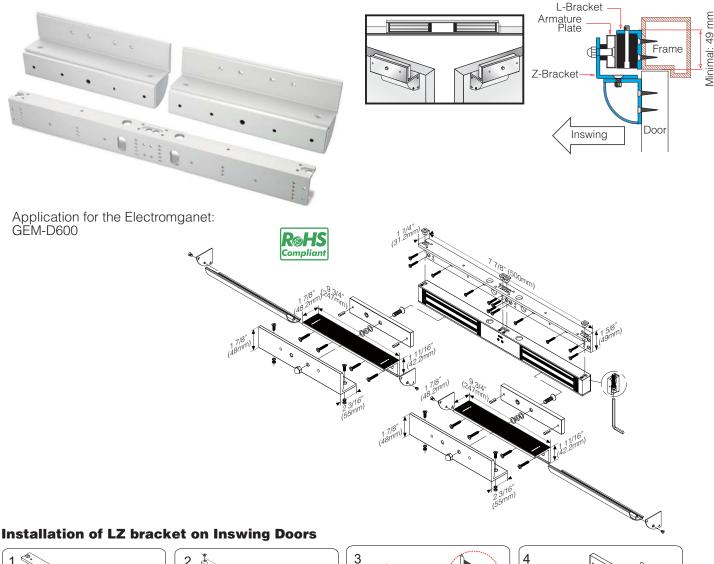




Install L bracket on the door frame. Make sure the door may be opened / bracket with fixing screws. closed.




Fasten the armature plate to Z bracket. Insert the rubber washer between them.




Fasten the electromagnet to L




Close the door and turn on the power.




Assemble Z bracket. Make sure it is still loose.



Let the armature plate and electromagnet bond together. Press Z bracket to the door leaf.



Insert the guide pins into the armature plate.

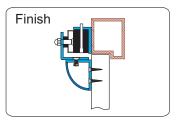

Fasten Z bracket to the door leaf.



Tel: +886-2-2267-7986 Fax: +886-2-2267-9876 www.gianni.com.tw inquiry1@gianni.com.tw