


LZ-NH2350N Bracket

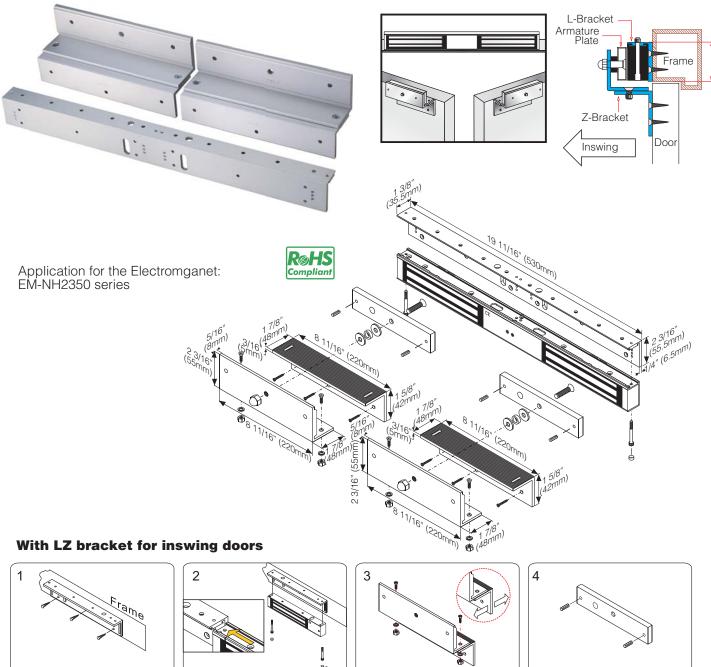


Install L bracket on the door frame. Make sure the door may be opened / bracket with fixing screws. closed.



Fasten the electromagnet to L




Assemble Z bracket. Make sure it is still loose.




Minimal: 55.5mm


Insert the guide pins into the armature plate.

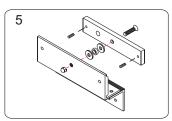


Fasten the armature plate to Z bracket. Insert the rubber washer between them.



Close the door and turn on the

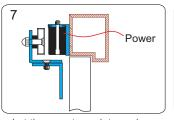

Let the armature plate and electromagnet bond together. Press Z bracket to the door leaf.



Fasten Z bracket to the door leaf.

